

Menu Operations

B110

Config	From Normal Operation
Chnl setup	UP/YES and ENTER - 5 sec
Input	From Normal Operation
Sensor type	UP/YES and DOWN/NO - 5 sec
Cal	From Normal Operation
	UP/YES - 5 sec

B200

Control/Setup	From Normal Operation ESCAPE and ENTER 5 sec 1) Enable/Disable Channels 2) Config Channel Settings
Input	Beacon off
Sensor type	Press/hold ENTER Turn toggle switch on Keep hold ENTER til INPUT SETUP...
Cal	From Normal Operation ENTER and UP/YES - 5 sec

B410A

Global menu	From Normal Operation
Strobe/Relay/buzzer controls	ESCAPE and UP/YES - 5 sec
Config	From Normal Operation
Chnl setup	ESCAPE and ENTER - 5 sec
Input	B410A off
Sensor type	Press/hold ENTER Turn toggle switch on Keep holding ENETER till display lights
Cal	From Normal Operation ENETER and UP/YES - 3 sec

B800

Config	From Normal Operation ESCAPE and ENTER 1) Enable/Disable Channels 2) Calibration 3) Config Channel Settings
--------	---