1. Connect an IrDA cable to a PC and start up the FlashSelf.exe (The screen below is displayed)

FlashSelf

COM Port

Port Name COM11   Refresh

OPEN

START   STOP

CLEAR
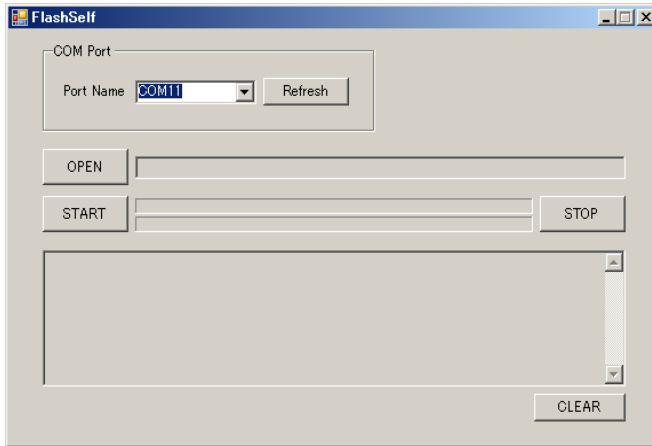
2. Turn the power of GX-6000 ON, and have it communicate with the PC.
   GX-6000 automatically enter the Communication Mode (PC TRANSMIT is displayed) and it moves to Firmware Update Mode

○Firmware Update Mode

2 alarm lamps are lighted
LCD display is turned OFF

3. Select a program data that is being written

FlashSelf

COM Port

Port Name COM11   Refresh

(1)Click the "OPEN" button

OPEN

START

開K

ローカル ディスク (C:) ▸ Borland ▸ StarTeam ▸ GX-6000 ▸ 05161_輸出管理規定_150925 ▸ motadd   motaddの検索

整理 ▾   新しいフォルダー

お気に入り   名前 △   更新日時   種類   サイズ
 ダウンロード   05117.mot   2015/08/18 18:53   MOT ファイル   1,835 KB
  デスクトップ   05148.mot   2015/09/14 19:28   MOT ファイル   1,851 KB
  最近表示した場所   05161.mot   2015/09/25 10:48   MOT ファイル   1,850 KB
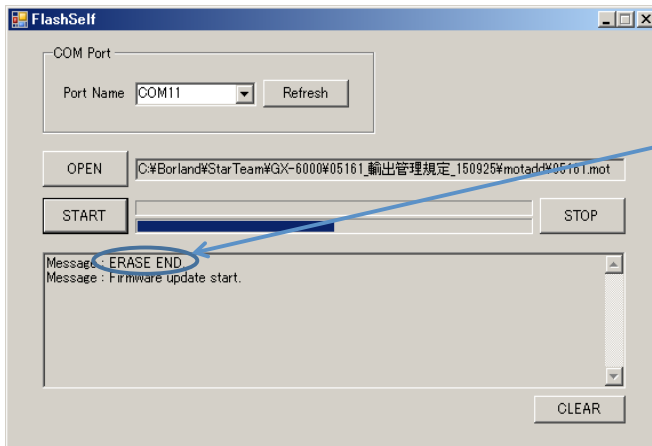   55148_DESok.mot   2015/09/16 18:16   MOT ファイル   1,850 KB
ライブラリ
  ドキュメント
  ピクチャ
  ビデオ
  ミュージック

コンピューター
  ローカル ディスク (C:)
  ローカル ディスク (D:)
  data files (¥¥rked-nas) (Z:)

ネットワーク

(2) Select "MotorolaHexFile(*.mot)

ファイル名(N): dd¥05161.mot   MotorolaHexFile(*.mot)

開く(O)   キャンセル

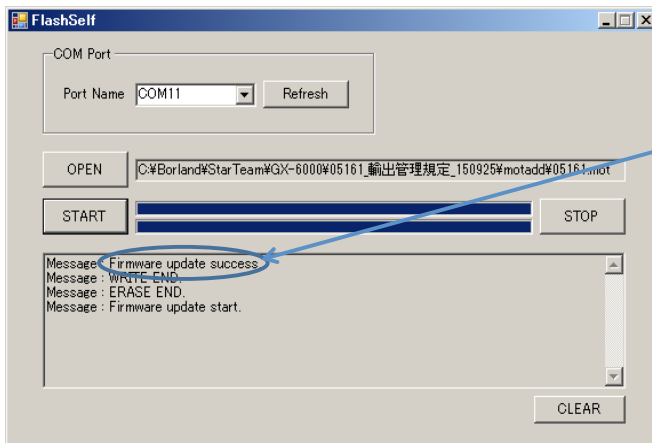(3) Select a program that is being written

4. Start writing
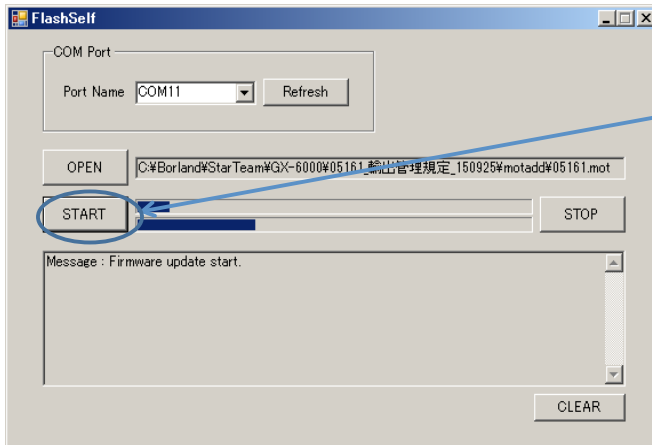
Click "START" button to start writing.
(After this, no manual operation is needed)

Approx. 1 minute later, "ERASE END." is displayed

Approx 30 minute later, "Firmware update success." is displayed

(Caution)
If it fails writing while in Writing process, it is designed for GX-6000 to start up at Firmware Update Mode.
Therefore it is possible to continue firmware update via IrDA.

5. Turn the power of GX-6000 OFF (Manual operation only)
   Turn the power of GX-6000 OFF by puressing POWER/ENTER button.

6. Turn the power of GX-6000 ON, then GX-6000 will operate with new firmware.

"